


### TOOL OPERATION

- 1 Adjust the FLEX foot to a sample of your flooring (see FLEX Foot Adjustment).
- 2 Connect air source regulated at 90 psi
- 3 Make sure flooring strips are together tightly
- 4 Place nailer on tongued edge of flooring
- 5 Pull safety trigger and strike the plunger with rubber end of the mallet
- 6 The nailer will drive and set the nail at the correct 45 degree angle

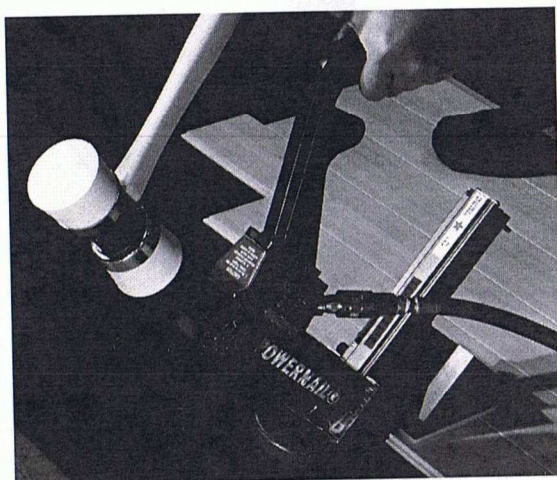

For additional technical support, visit  
[www.powernail.com](http://www.powernail.com)

Free technical support, contact  
Powernail USA at 800-323-1653

### LOADING CLEATS

- 1 Slide a clip of nails into the end of the nail channel feed slot.
- 2 Pull back the black nail pusher past the nails and let go.
- 3 Tension is now applied to the nails for use.



### UNLOADING THE NAILER

- 1 Pull back on the black nail pusher knob and hold.
- 2 Tilt nailer back until nails slide out of nail channel.



### FLEX Foot Adjustment:

Wood profiles and thickness may vary from one manufacturer to the next. Adjust the FLEX foot to fit your flooring before each use.

1. Loosen the 2 hex screws under the foot (See figure 1).
  2. Set the nailer on a sample of your flooring as you would for nailing.
  3. Raise or lower the foot adjustment so that the nail direction is pointing into the 90° angle created by the tongue and the top of the wood (see Figure 2).
- The nailer should leave a small gap above the tongue of the flooring. For wood with a nail pocket, line up the nailer so the nail will enter towards the top of the nail pocket.
4. When the adjustment lever is in the correct position for your wood sample, tighten the two hex bolts to lock the FLEX foot into place.
  5. Always check your adjustment by nailing a sample of your flooring to ensure the nail is driving into the nail pocket.

Figure 1. FLEX Adjustment Lever



Figure 2.

